




# **QUICK START GUIDE**


For detailed installation instructions and installation video guides visit our website support.myiblinds.com.




## **IBLIND MOTOR**

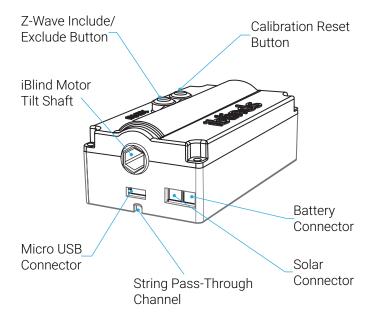


### WINDOW BLIND COMPONENTS-

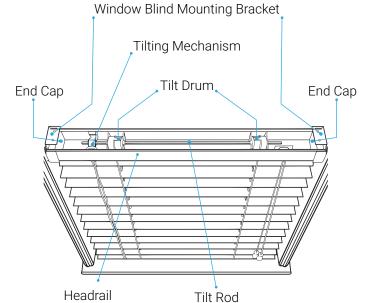


### **INSTALLATION**

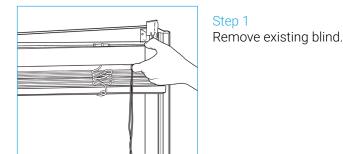


Step 2

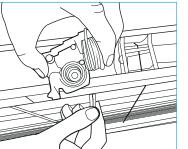


Remove existing tilt mechanism.

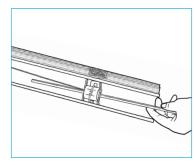


Step 3 Remove tilt rod from headrail.

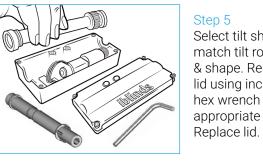

Step 5 Select tilt shaft to match tilt rod size & shape. Remove lid using included hex wrench & install appropriate tilt shaft.

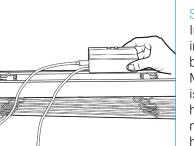



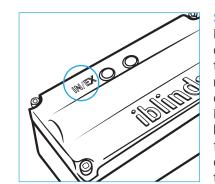

Carefully tuck the cables into the headrail. Take care to

route the hidden cables where they won't interfere with


the tilt rod or any of the other moving mechanisms in the

Step 9

headrail.

Follow your Z-Wave controller's directions to place it in inclusion mode. Make sure iBlind device is powered on. Press the inclusion button once and wait for the device to be discovered and joined to the Z-Wave network.


#### CHARGING

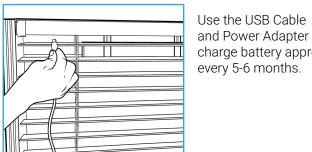

and Power Adapter to charge battery approx. every 5-6 months.

For more charging options visit our support website support.myiblinds.com


Install charge adapter inside headrail and attach clip from the bottom. Wires should be facing outer end of blind, with micro USB port facing

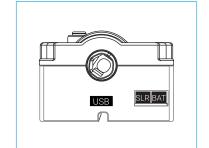

#### Step 6

Connect battery cable to the orange BAT port. Connect Charge adapter cable to the USB port.

For more power options visit our support website support.myiblinds.com

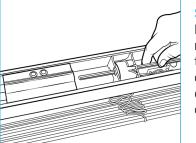

Re-insert tilt rod. rotating it to pass through the shaft. Be careful to keep all tilt drums in the same orientation.